



BUSH PILOT FLASHLIGHT

USER MANUAL

USER MANUAL

FOR MORE INFORMATION
AND VIDEO DEMO:

FLIGHTOUTFITTERS.COM

**THANK YOU FOR
YOUR PURCHASE!**
You're now well equipped to handle all of
your cockpit lighting needs. Please refer to
the following manual for user instructions.

WARRANTY INFORMATION

This product is guaranteed against all
defects in workmanship and materials for
the original owner for one year from the
date of purchase.

For any additional information:
Call us at **513-688-7300**, or
Email us at help@FlightOutfitters.com
U.S. Patent: D 659,869 S



FLASHLIGHT OVERVIEW

 


LIGHT MODES & SPECIFICATIONS

The BUSH PILOT FLASHLIGHT is equipped with a Smart Select Dial to easily navigate the 5 lighting modes. Simply turn dial to align the arrow with the desired light mode. Light modes can be changed while light is ON or OFF.

FIVE LIGHT MODES

- S** - STROBE
- H** - HIGH
- M** - MEDIUM
- L** - LOW
- SL** - STEALTH LIGHT

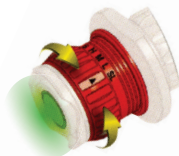

STROBE: For emergency situations and distress signaling, provides 2.5 hours of continuous use.

STEALTH LIGHT: Provides low signature **GREEN** light from the power button for low-profile, stealth mode.

RUN TIME & DISTANCE RATINGS


STROBE	HIGH	MEDIUM	LOW	STEALTH LIGHT
2.5 hrs.	2.5 hrs.	4.5 hrs.	13 hrs.	120 hrs.
120 meters	120 meters	85 meters	40 meters	4 meters

CHARGING YOUR USB MOBILE DEVICE

TO REVEAL or TO HIDE THE USB CHARGING PORT: turn the Anti-Roll Tactical ring clockwise/counter-clockwise

USB POWER BANK:

 Connect a compatible USB cable from your device to the USB port on flashlight.

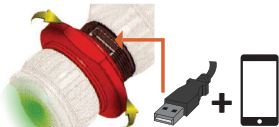

TO ACTIVATE POWER BANK: Hold flashlight power button for 3 seconds to activate. 2 **GREEN** blinking LEDs in the power button will confirm charge mode.

POWER BANK STATUS: When 1 steady **RED** LED & 1 **GREEN** blinking LED shows, this indicates that flashlight battery level is 25% or less. This allows you to decide to keep charging your device or maintain 25% power in the flashlight. Flashlight turns OFF at 10% to protect the battery from over draining.

 
TO USE LIGHT WHEN CHARGING: Before connecting USB cable, turn select dial to "L" to activate LOW mode. Turn the dial to any other light mode to deactivate the light. Only LOW mode can be accessed during charging.

4X ADJUSTABLE ZOOM & STEALTH RING

The BUSH PILOT FLASHLIGHT is equipped with a 4x adjustable zoom that changes from spotlight to floodlight with a simple twist of the bezel.

1 SHORT-RANGE: Turn the head of the flashlight clockwise for floodlight, perfect for short-range lighting.

2 LONG-RANGE: Turn the head of the flashlight counter-clockwise for spotlight, perfect for focusing light up to 120 meters.

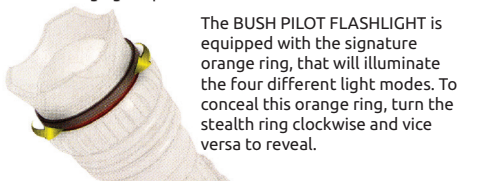


The BUSH PILOT FLASHLIGHT is equipped with the signature orange ring, that will illuminate the four different light modes. To conceal this orange ring, turn the stealth ring clockwise and vice versa to reveal.

BATTERY CARE & REPLACEMENT

BATTERY ASSEMBLY

 - 1** To open battery compartment, unscrew (counter-clockwise) the end cap where the button and magnetic base are located.
- 2** Remove old battery, containing (1) pre-installed 18650 Li-ion battery.
- 3** Battery is designed for 500 life cycles. Before replacing with new battery, make sure current battery is no longer holding charge. Remove and dispose of battery properly.



- 4** Insert new battery (NEBO 6698BAT) as indicated by arrow. Make sure battery is facing the correct direction (arrow pointing towards the front). Reattach end cap by turning clockwise.

Note: Use only recommended battery type (NEBO 6698BAT).

CHARGING THE FLASHLIGHT

TO REVEAL or TO HIDE THE USB CHARGING PORT: turn the Anti-Roll Tactical ring clockwise/counter-clockwise

CHARGING YOUR FLASHLIGHT

- 1 CONNECT THE SUPPLIED USB CABLE:** One end into any USB port and the other end into the USB port of the flashlight.
- 2 CHARGING MODE:** While charging, a steady **BLUE** LED will come ON in the power button, to indicate flashlight is charging.
- 3 CHARGE COMPLETED:** Once flashlight is fully charged (approx. 6.5 hrs), **BLUE** LED will turn OFF.
- 4 TO USE LIGHT WHEN CHARGING:** Before connecting USB cable, turn select dial to "L" to activate LOW mode. Turn the dial to any other light mode to deactivate the light. Only LOW mode can be accessed during charging.

